
Using Club Radios

The Club has a VHF Licence for channel 37A/ M1 ONLY. CHANNEL 16 MAY BE USED TO CONTACT ABERDEEN COASTGUARD IN CASE OF EMERGENCY – HOWEVER, IT MAY BE QUICKER TO TELEPHONE THEM via 999 or 112. When possible the Event Organiser and Safety Boat Crews should monitor Channel 16 in addition to 37A/M1 by selecting Dual Watch

## **Instructions for Club handhelds:**

Club default settings are: Channel 37A (= Marina 1), high power, squelch 01, functions locked (Marina 2 is channel P4)

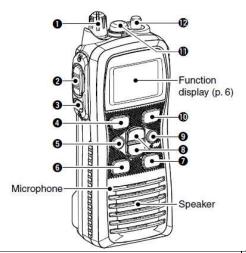

AFTER USE: Turn off Rinse in fresh water Dry Return to charging cradle

Turn on	Rotate VOL (1) clockwise
Adjust volume	Rotate VOL(1) fully clockwise
To transmit/receive	Hold down PTT (2) to transmit; release to receive
To unlock/lock set functions	Toggle (9) for one second to unlock/lock - NB <b>PO</b> bottom left display = locked
To change power	Push (9) to cycle between LOW, MID & high – NB no indication displayed for high power
To set squelch (unlock first)	Press & hold [()) (3) adjust squelch with []/[]. (8). Use lowest number without carrier noise
To change channel (unlock first)	Use <sup>[▲]/[▼].</sup> (8)
For Channel 16 (unlock first)	Press [16/C](4) briefly
Turn off	Rotate VOL (1) fully anti-clockwise to click

Turn On	Press and hold VOL/PWR for 1 second
Turn Off	Press and hold VOL/PWR for 2 seconds
Working Channel	Rotate large knob to select <b>N1</b> (Marina 1/channel 37A)
Volume	Rotate VOL/PWR as required
Squelch	Rotate <b>SQL</b> fully anti-clockwise then clockwise until 'hiss' disappears
Transmit Power	Toggle the <b>H/L</b> between 1W & 25W – 1W shows `LO'
Transmit	Hold down <b>push-to-talk</b> on side of microphone
Dual watch	With N1 selected, press <b>DW(IC)</b> to also monitor Channel 16 (transmissions will only be made on N1). Press <b>DW(IC)</b> again to deselect dual watch
CHANNEL 16 IN EMERGENCY	In an emergency requiring outside assistance, press the red 16/9 key on either the set or microphone to select channel 16 in high power. The coastguard callsign is 'Aberdeen Coastguard'. To revert to the previous channel rotate the large knob until selected

## Instructions for the Club base station in the Starter's Box

## Hints:

The digital selective calling (DSC) features of the radio are not enabled; ignore any warnings to this effect on the display

The club is licensed by Ofcom as a Coastal Radio Station. We are only normally allowed to transmit on Marina 1 (a.k.a. channel 37A) & Marina 2 (**N1 & N2** on the display )

Whenever possible select dual watch to monitor channel 16 for any emergencies in the local area to which the club may be able to respond.

In an emergency, all concerned should work on channel 16 unless told otherwise by the Coastguard

Chanonry Sailing Club is at 57°34'.7N, 004°08'.1W

Postcode IV10 8TP